



HIGH PERFORMANCE PUMP HEAD SEAL REPLACEMENT INSTALLATION INSTRUCTIONS

Customer Service
800.783.7257
sarisinfrastructure.com

Tell Us What You Think



sarisinrastructure.com/feedback

Register your product for updates
sarisinrastructure.com/registration



Tools Required


- T10 security torx bit (part number 28967, sold separately)
- Torque wrench (recommended)

High Performance Pump Head Seal Replacement

- 1 Remove 2 face plate bolts with T10 security torx drive. Remove face plate.



- 2 Note orientation of seals in the pump head.

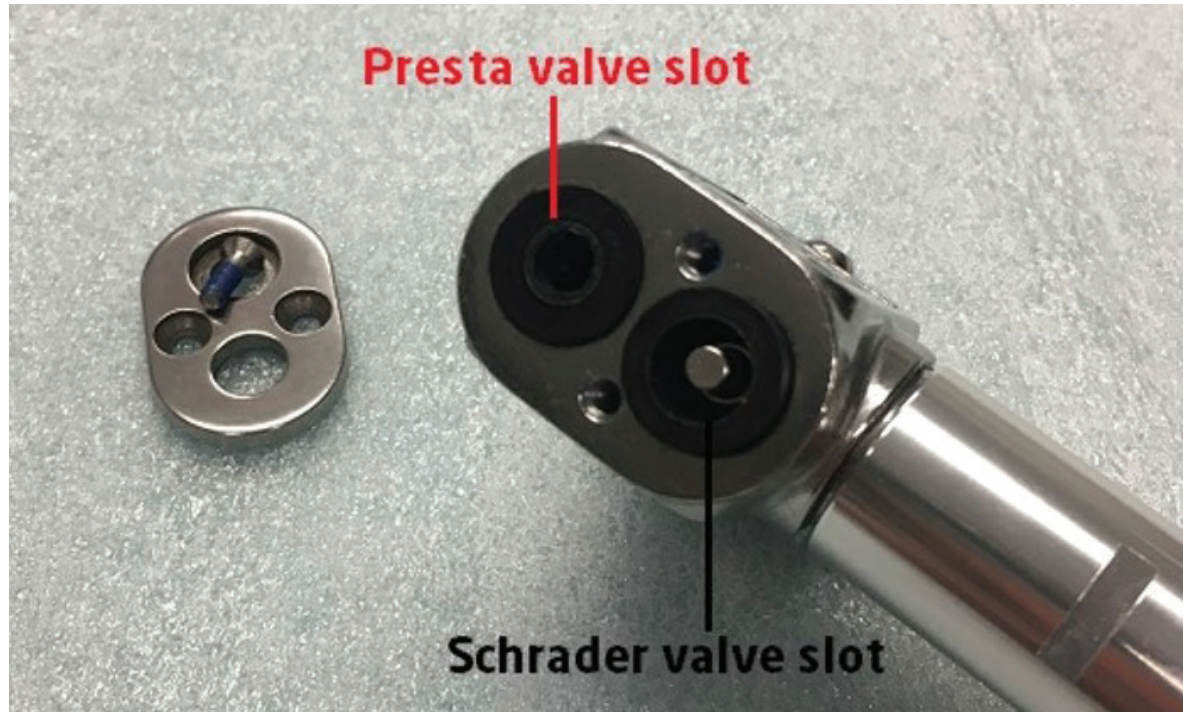

- 3** Remove old seals and install new seals in same orientation.



- 4** Reinstall face plate, note orientation of face plate. Smaller hole on face plate goes over smaller hole on seal. Tighten face plate bolts to 10-15 in-lbs.



WARNING: Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment or inappropriate placement, improper use, inadequate maintenance, or neglect of this product. Placement of this product is beyond control of the manufacturer. It is the end users reasonability to place this product so as to avoid potential pedestrian or playground accidents.

WARRANTY: We warrant this product to the first consumer to be free from defect in material and workmanship for a period of one year from date of purchase. Please retain your sales slip for your records. Any product or part thereof found to be defective within that period will be replaced without charge provided that: (1) the product was not misused; (2) no alterations or modifications were made; (3) its failure resulted from a defect in material or workmanship and not from normal wear expected in the use of the product; (4) the product or part is delivered, freight prepaid, to Saris Products.

Manufacturer's only obligation shall be to replace such products or parts proved to be defective.